

## SPEED-06 PRODUCT OVERVIEW

# Turns **1** PC into **6** PCs

### Benefits


Turns 1 PC into 6 PCs  
Bundled hardware and software  
Easy setup

### Overview

Speed-06 are a kit bundled with Speed software which enables two to six users to share the computing power and resources of a single computer (Host PC). All users can simultaneously perform any tasks, for example: share a printer, CD-ROM drive, and even surf the Internet independently with one phone line, one ISP account and one modem, but they would perform on a standard Windows 2000 Professional, Windows XP Professional (32-bit) or Windows server 2003,

And with Speed-06, additional users are supported by adding PCI video cards and monitors along with PS/2 keyboards & mouse, and speakers, which saves tremendous costs!



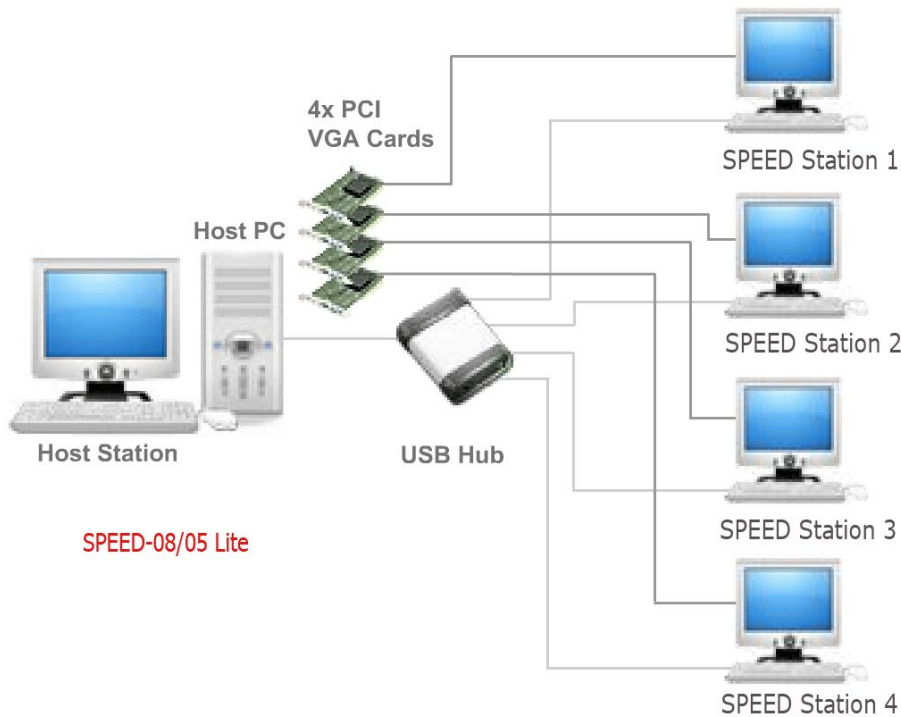

## Software Benefits

- » Reducing your initial investment
- » Reducing your cost of upgrading
- » Offering ease of maintenance and services
- » Reducing Total Cost of Ownership (TCO)
- » Upgrading Host PC automatically upgrades the Speed Stations

## Software Features

- » Support multiple users to surf the Internet and access emails at the same time using with unique customized desktop and network login.
- » Supports displaying of information directly from DOS, Windows and Java applications of the Host PC
- » Supports centralized data storage for Host PC and Speed Station users
- » Support multiple users to share the same peripheral devices.

## Speed-06 Package Contents:

- » USB and Video Combo Cable (5 meters)
- » Speed-06 installation CD
- » Installation Manual

» Speed-06

## System Requirements

### 1. Recommended System Requirements on Host PC

- » Pentium®III 450MHz or faster
- » Microsoft Windows®2000 Professional / Server or Microsoft Windows XP Home / Professional (32-bit) Edition
- » 192MB minimum for 2 users (64MB per additional user)
- » USB Ports
- » Available PCI

### 2. Graphics Cards

The following PCI and PCI Express VGA cards\* are recommended for use in Speed-06 Stations:

#### PCI VGA Cards:

- » ATi Rage 128 Pro
- » ATi Radeon - all models
- » NVIDIA TNT2 - all models
- » NVIDIA GeForce - all models
- » NVIDIA Quadro - all models
- » SiS 6326 (single station only)

#### PCI Express VGA Cards:

- » NVIDIA Quadro
- » ATi Radeon

## Additional Hardware Needed for Speed PC

- » Monitor
- » PCI VGA card or Dual-head VGA card
- » PS/2 Mouse & keyboard
- » Speakers and MIC
- » USB interface (only for Speed-08, optional)

\*\*: It is mandatory to configure the above devices using Windows native mouse and keyboard drivers.

## How does Speed software work?

Today's PCs are extremely powerful. Even while you're working on your PC, a significant portion of the PC's processing power goes unused. With our latest developed Speed software, two to six users\* can share the computing power and resources of the Host PC at the same time.

## SPEED-08 Multi-user Kit Datasheet

| Item                   | description   |
|------------------------|---|
| shape                  | L*W*H: 166mm*128cm*29mm   |
| color                  | Silver gray/black   |
| CPU                    | Share the main PC's CPU   |
| EMS memory             | Share the main PC's   |
| HD                     | Share with the main PC or access the net HD   |
| Max shared PCs         | 7 users(depend on the amount of PCI slot)   |
| Distance required      | 5meters, or 25meters if add signal amplifier  |
| Insert PCI card or not | Need PCI card(models for your choose,8M standard,32M,64M,128M and also double link head)  |
| Link mode support      | USB cable+ VGA cable  |
| movies                 | Windows XP, Windows 2000, Windows 2003 versions   |
| Audio                  | Perfect full screen   |
| Keyboard and mouse     | Perfect speak out and in  |
| Support USB            | PS/2(some USB)  |
| parallel interface     | Support all kinds of USB facilities   |
| parallel printer       | Share with the mother board   |
| CD-ROM                 | Share with the mother board   |
| Color                  | Share the host PC's   |
| Distinguish rate       | 32 bit color, no different with standard PC, support XVGA standard CRT and LCD minitors32 |
|                        | Support all standard VGA mode   |

## Installation



Insert the VGA card into the available PCI slot in host PC



Connect Monitor to the Host PC using VGA cable and connect Speed-06 by USB cable



Connect the mouse and keyboard to SPEED-06



Start computer and then test keyboard, mouse and monitor



Connect the speakers to SPEED-08 (optional)



Install SPEED Software and then use it after restart